

# SALVAJOR Model MSS & MSS-LD

Pre-Wired Manual Start-Stop Control Panel  
for Disposer Models: 100 - 200 - 300 - 500

Manual  
Start  
Stop

## SPECIFICATIONS

- NEMA 4 Stainless Steel Corrosion-Resistant Enclosure
- Magnetic Contactor
- Start/Stop Push Buttons
- Terminal Strip Connections

### OPTIONAL:

- Line Disconnect (LD)



**MSS**



**MSS-LD**



### VOLTAGES AVAILABLE

#### 1-PHASE

115 VOLT, 208-230 VOLT

#### 3-PHASE

208-230 VOLT, 460 VOLT

◆ SPECIFY EXACT OPERATING VOLTAGE ◆

### ACCESSORIES AVAILABLE

- #P - MOUNTED 1/2" SOLENOID VALVE AND FLOW CONTROL
- #PP - MOUNTED 1/2" SOLENOID VALVE, FLOW CONTROL AND PRESSURE SWITCH
- #980104 - MOUNTING BRACKET FOR MSS, MSS-LD OR REMOTE START/STOP
- #RSS - REMOTE START/STOP

(Specifications subject to change without notice)  
Current specification details may be found online  
at [www.salvajor.com](http://www.salvajor.com)

### SAFETY FEATURE

 
The MSS & MSS-LD controls include an operator safety feature that prevents automatic starting of the disposer after a power interruption. To re-start the disposer, the operator must push the **START** button.

### MODEL MSS & MSS-LD DISPOSER CONTROL


is for use with  
Salvajor Models:  
100 - 200 - 300 - 500  
WEIGHT: 8 LBS.



**MSS**

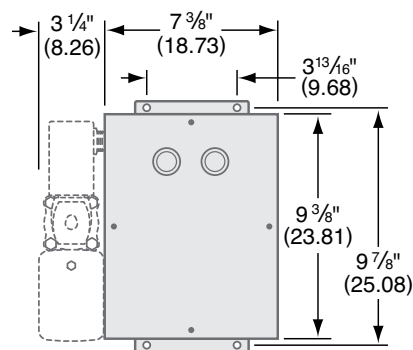


**MSS-LD**

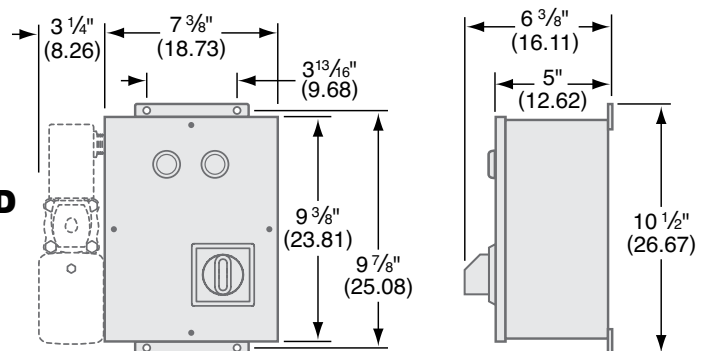 



NOTE: Dimensions in parenthesis are in centimeters

# Typical Installation Diagram of Model MSS & MSS-LD Control Panel with Disposer

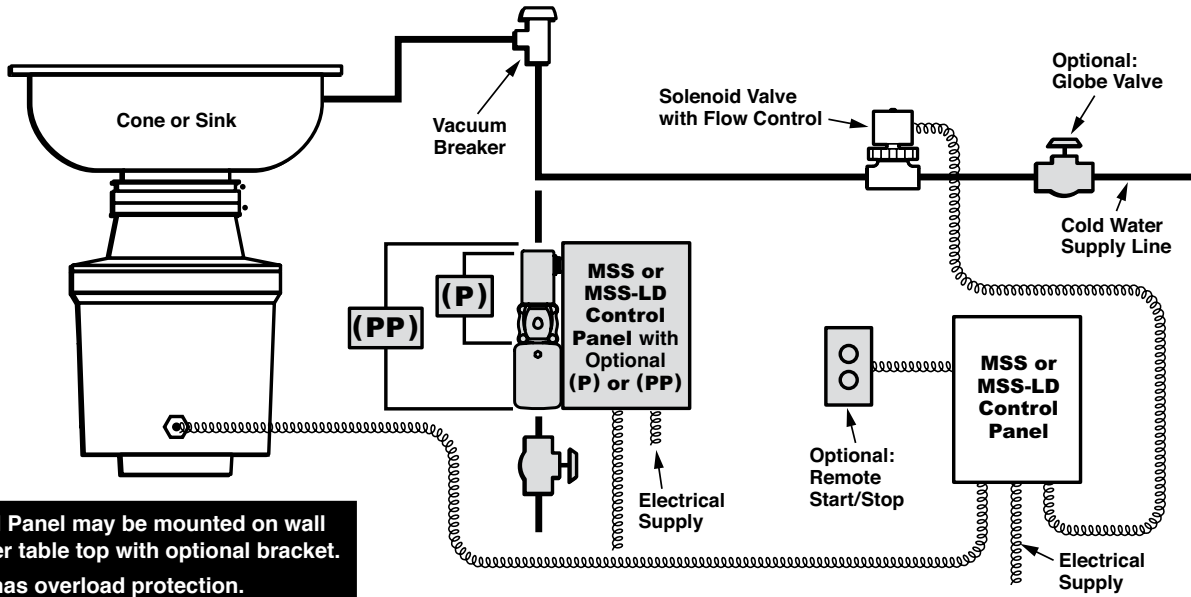 

Control Panel may be mounted on wall or under table top with optional bracket. Motor has overload protection.

  NOTE: INSTALL PER ALL APPLICABLE CODES

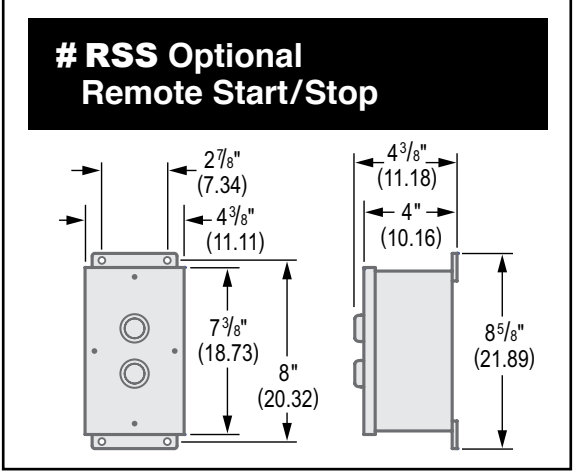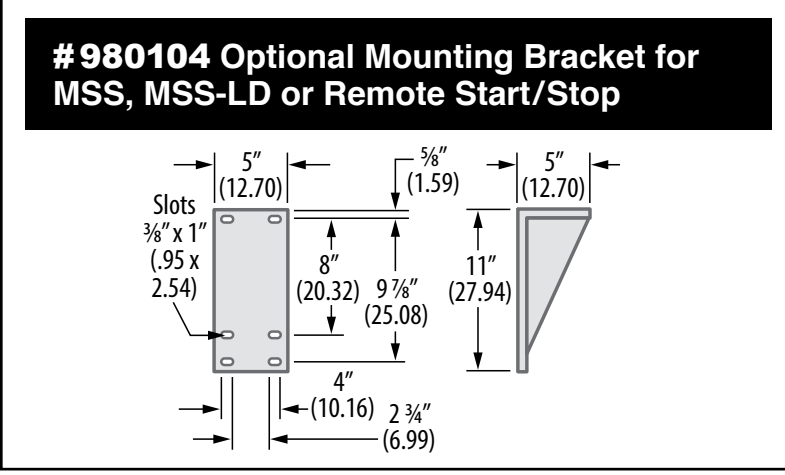

NOTE: Dimensions in parenthesis are in centimeters

**SAMPLE SPECIFICATION:**  
 MSS control panel with start-stop push buttons and 24 volt safety circuit.  
 MSS-LD includes Line Disconnect.

### Item Numbers for Ordering

CONTROL MODEL	VOLTAGE	PHASE	ITEM NO.
<b>MSS</b> or <b>MSS-TD</b> or <b>MSS-P</b> or <b>MSS-PP</b>	115	1	<b>MSS4</b>
	208 or 230	1	<b>MSS5</b>
	208 or 230	3	<b>MSS7</b>
	460	3	<b>MSS9</b>
<b>MSS-LD</b> or <b>MSS-LD-TD</b> or <b>MSS-LD-P</b> or <b>MSS-LD-PP</b>	115	1	<b>MSSLD4</b>
	208 or 230	1	<b>MSSLD5</b>
	208 or 230	3	<b>MSSLD7</b>
	460	3	<b>MSSLD9</b>

◆ SPECIFY EXACT OPERATING VOLTAGE ◆

# SALVAJOR®

Manufacturers of Commercial Food Waste Solutions - Since 1944

4530 East 75th Terrace Kansas City, MO 64132-2081, USA  
 816.363.1030 | Toll Free: 1.800.725.8256 | Service: 1.888.725.8256 | Fax: 1.800.832.9373  
 sales@salvajor.com | service@salvajor.com | www.salvajor.com

Printed in USA  
 Form No. MSS/LD (05-18)