



TroughVeyor[®]

Model TVL & TVR


HOW IT WORKS

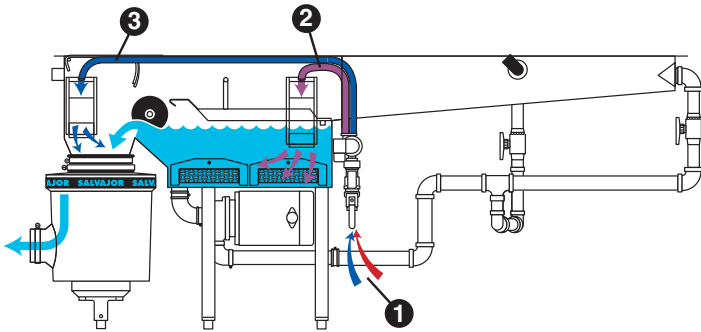

- 1 Hot and cold water pass through a water blender set at 107° F.
- 2 The blended water enters the tank at the rate of 5 gallons per minute.
- 3 Cold water is introduced directly into the disposer grind chamber at the rate of 2 gallons per minute.

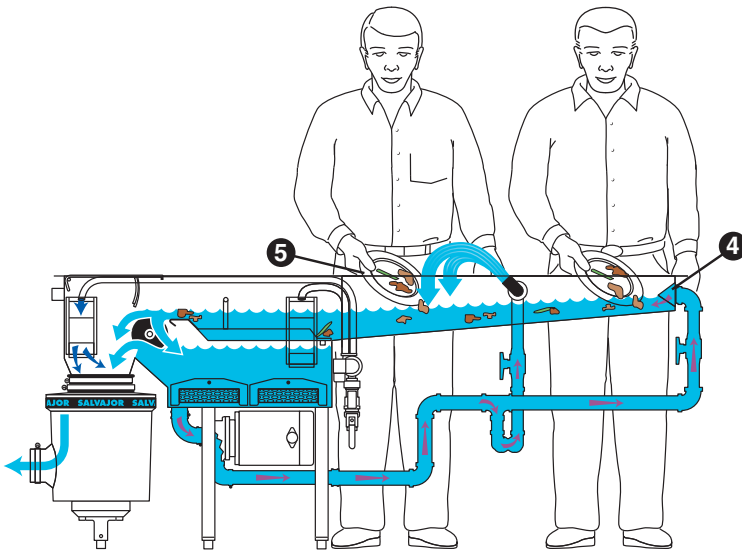

- 4 The TroughVeyor pump begins circulating water down the trough.
- 5 Dishes are scrapped into the trough by hand or passed through the water plume coming from the rubber gusher heads (optional).

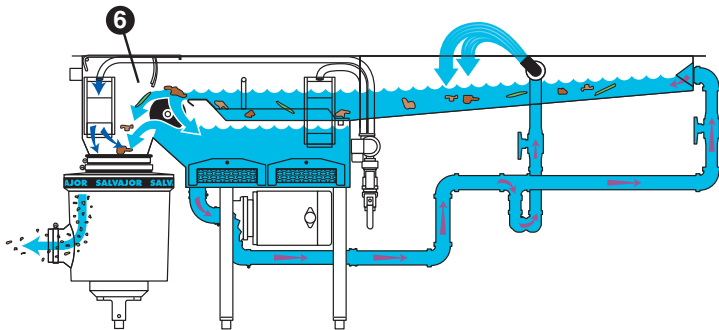

- 6 Water falls through the separator and returns to the tank reservoir while the waste falls into the disposer.

The Salvajor Company 4530 East 75th Terrace Kansas City, Missouri 64132-2081, USA
1-800-821-3136 (816) 363-1030 FAX: 1-800-832-9373
www.salvajor.com Email: sales@salvajor.com service@salvajor.com
Manufacturers of Commercial Food Waste Disposing Systems since 1944